



Aeration Compressor Air Filter Replacement Instructions

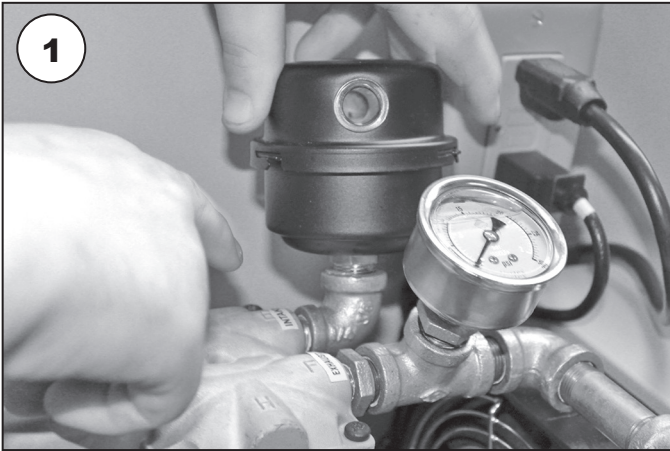

1
Twist to unlock

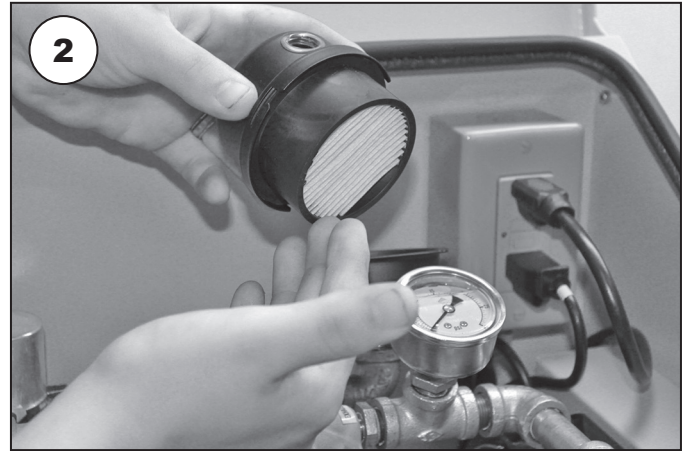

2
Remove the old air filter




3
Insert the new air filter



4
Line up the notch on the top



5
With the notch on the bottom piece

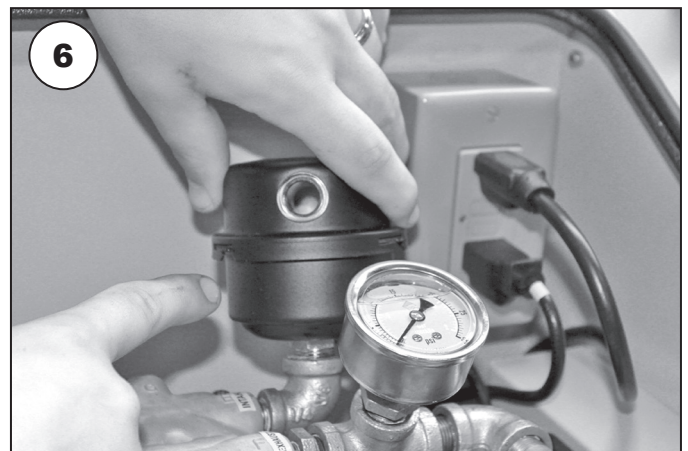

6
Twist to lock